

PIX-ARM

Mounting Accessory for the Portable PIX Recorders



Description

The PIX-ARM allows the PIX video recorders to be mounted to various equipment. The 1/4-inch - 20 screws on each end allow the PIX recorder to be mounted to a camera, tripod, or any other secure piece of equipment. The center lever will lock all three articulation points simultaneously for quick adjustments of the PIX's orientation and position.

How to Use

- Loosen the center knob and orient the screws so they can be easily screwed onto the intended equipment, then tighten the center knob down again.
- The side of the arm that has a rubberized nut is intended for the PIX recorder. Attach the other side onto the secured equipment (camera, tripod, etc) first (Remove any unneeded nuts, if necessary).
- Screw the PIX recorder onto the opposite side. Rotate the PIX recorder 4 to 5 full rotations, but do not tighten it down completely. Finish securing the PIX by rotating the rubberized nut to tighten it to the PIX.
- While holding the PIX recorder in one hand, loosen the center knob with the other hand. Position the PIX recorder to the desired position and tighten the center knob.

Specifications

- Arm top: 1/4-inch - 20 screw with nut
- Arm bottom: 1/4-inch - 20 screw
- Extended length: 9.125 inches
- Maximum load: 10 lbs.
- Weight: 11 oz.