

PIX-HOOD

Removable LCD Hood for PIX Recorders



Description

The PIX-HOOD accessory for the PIX 240 and PIX 220 recorders is a light-weight, removable hood to reduce glare on the LCD screen during operation.

Contents

1) PIX-HOOD

Attaching the PIX-HOOD to the PIX recorder

To attach the PIX-HOOD to the PIX recorder, simply align the PIX-HOOD's corners with the top corners of the PIX recorder. The built-in neodymium magnets will snap the hood securely in place.

To remove the PIX-HOOD, grasp any of the surfaces of the hood and pull firmly and directly away from the PIX recorder's front face.

Specifications

- Flocked-velvet lined interior to reduce reflections
- Neodymium magnets provide secure connection to PIX recorder